

How to use “ALISS” AquaBead Life Support System



External hook up portion of
ALISS

This is easy. Simply hook up
your koi pond air pump to this
barbed fitting.

To operate **ALISS**

1. One thing to remember is that you will never run the koi pond air pump if your pond water pump is running. So shut down the water pump.
2. Move the Multiport valve to the “RINSE” position. This will allow the air to enter the bottom of the filter and rise through the beads, supplying oxygen, while gently tumbling them so all of the bacteria gets a fresh breath of air. The air, after rising through the beads, will exit out the top spray bar and then out the waste line.
3. Simply turn on your pond air pump. The valve on “**ALISS**” will open automatically and dispense the much needed oxygen to the bacteria.
4. You can sit back and relax until you can resume normal operation enjoying the peace of mind that is built into every AquaBead filter.

If you have questions, give us a call on the toll free
Customer Support Line
1-888-766-3691